


BPW Suspension SLM
Part Identification

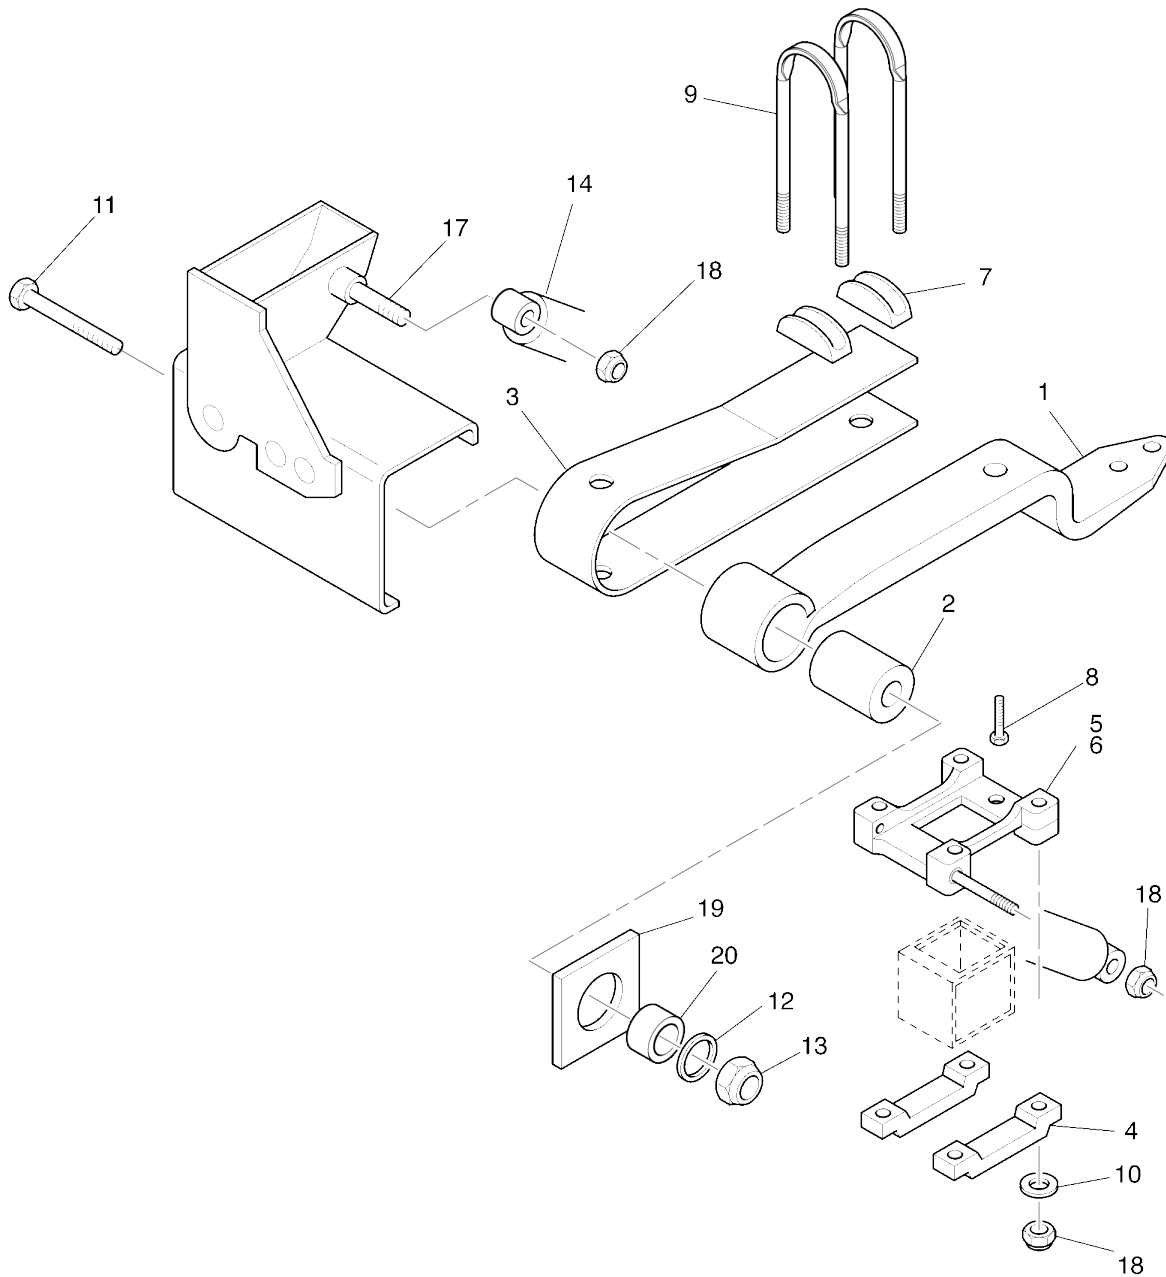

BPW Suspension SLM - Parts List

Item	Description	OE Part No	airsprings.com Part No
1	Spring	05.082.12.93.0	51056
2	Bush	02.031.69.00.0	50238
3	Locking plate	05.348.30.05.0	50350
4	Spring pads	03.032.26.62.0	50351
5	Spring pads	05.032.26.46.0	50352
6	Spring pads	05.032.26.45.0	50353
7	Segment	03.345.21.01.0	50354
8	Bolt	03.084.74.43.0	50100
9	U-Bolt	03.138.44.08.4	50185
10	Disc	02.540.12.50.7	50244
11	Spring bolt	03.341.05.03.0	50202
12	Disc	03.320.32.38.0	50355
13	Lock Nut	03.260.15.01.0	50189
14	Shock absorber	02.370.27.00.0	53018
15	Bush	02.031.62.10.0	50356
16	Rubber bump stop	02.280.50.10.0	50357
17	Shock absorber thread bolt	03.177.24.29.0	50358
18	Lock Nut	02.522.07.41.2	50219
19	Plate	03.281.15.03.0	50359
20	Bush	03.113.01.34.0	50360

airsprings.com contact:

UK +44 (0) 1925 810 400
Ireland +353 (0) 45 875 996
(NI) +44 (0) 2890 740 055
Poland +48 (0) 785 875 996



airsprings.com

International Parts Distributors